UltraBoard 955 Numeric **User Manual**



Work Smart - Feel Good



This user manual is written in English. To read this manual in other languages, go to www.bakkerelkhuizen.com

The features of this numerical keyboard


Thank you for purchasing the UltraBoard 955 Numeric. This numerical keyboard serves as an addition to the UltraBoard 950.

The main features of the numerical keyboard:

- Perfect addition to the UltraBoard 950;
- Modern and sleek design;
- · Easy to use;
- Keys with scissor mechanism and finger-friendly surface for optimal comfort and reduced muscle fatigue while typing;
- Four hotkeys.

Overview of the UltraBoard 955 Numeric

- 1 Hotkeys: Mail, Printscreen, ScrollLock and PauseBreak
- 2 NumLock:
 - When you press the NumLock and Fn keys, you can use the keys with the blue text and symbols.
 - If the indicator light next to the logo at the top right is off, the keyboard is in sleep mode.
 You can continue using the numerical keyboard by pressing the NumLock and Fn (bottom left) keys.
- (3) Indicator light: if the LED is green, the numerical keyboard is ready for use.

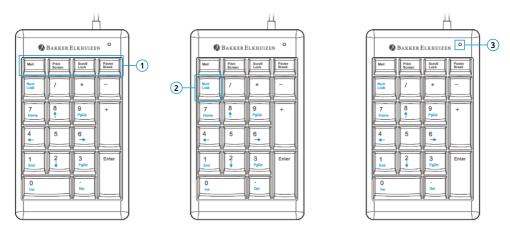

Getting started

- 1. Connect the numerical keyboard to one of your computer's USB ports.
- The device is plug & play. After connecting the UltraBoard 955 Numeric to your computer, it is immediately ready for use.
 A green LED will light up at the top right of the keyboard.
- When the light is off, press the NumLock and Fn keys to continue using the keyboard.

| Mail | Print Screen | Scroll Lock | Pause Break |
|-------------|-----------------|----------------|----------------|
| Num Lock | 1 | * | - |
| 7 Home | 8 † | 9 PgUp | + |
| 4 | 5 | 6 → | |
| 1 End | 2 ↓ | 3 PgDn | Enter |
| 0 | | Del | 1 |

Notes



Work Smart - Feel Good

BakkerElkhuizen

Taalstraat 151 5261 BC Vught The Netherlands tel. 036 546 7265 fax. 036 546 7830 email. info@bakkerelkhuizen.nl

All rights reserved. All trade names are registered trademarks of the manufacturers in question. All specifications are subject to change without prior notification.

www.bakkerelkhuizen.com