

cleankeys®


CKM2W Mouse  
Quickstart Guide & User Manual



“Cleankeys” is the brand for practical designer keyboards and PC mice. Well-engineered high-end features, a high-class design and high-power functions are the key features of these products; and they are an essential element in any premium setting. All the “Cleankeys” keyboards and mice enjoy an excellent reputation at up-market laboratories, special medical practices, clinics, cosmetic centres, design offices and private households.

“Cleankeys” keyboards and PC mice were introduced to the international market in 2009. The developer and manufacturer was the Cleankeys Inc. company based in Canada and this launch immediately struck a chord with customers. The simple concept involved bringing together design and tangible benefits for users in a credible manner. This has given rise to attractive waterproof keyboards and mice, which are very easy to clean and disinfect.


The GETT company in Germany took over the production and all the global sales rights in 2013. GETT has provided the “Cleankeys” brand with additional momentum in terms of quality assurance and quality optimisation. The global market penetration of the keyboards and mice is increasing thanks to the large, but closely-knit GETT sales network; as a result, these models are continuing to become the premium standard in any sector demanding nothing but the very best.

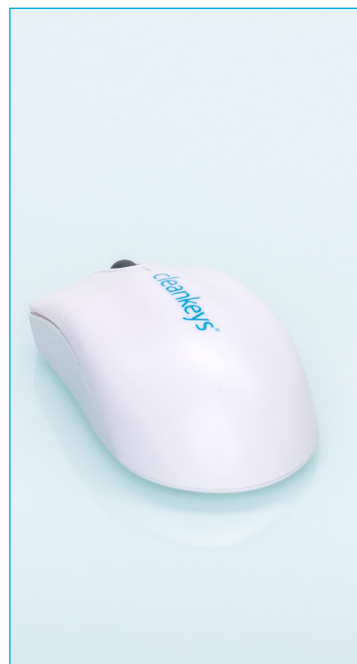




## What's in the Box

Charger

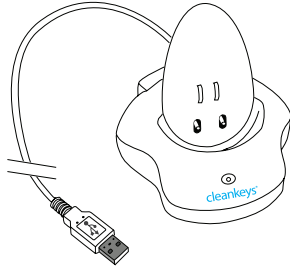

Wireless Mouse

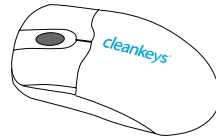




Micro Receiver



This Guide



## Setup

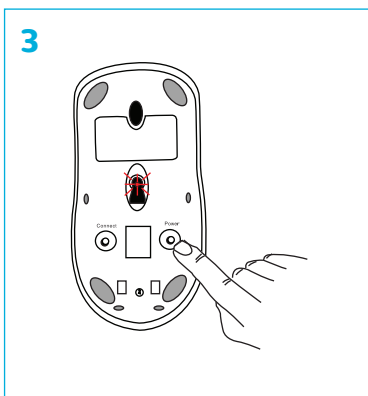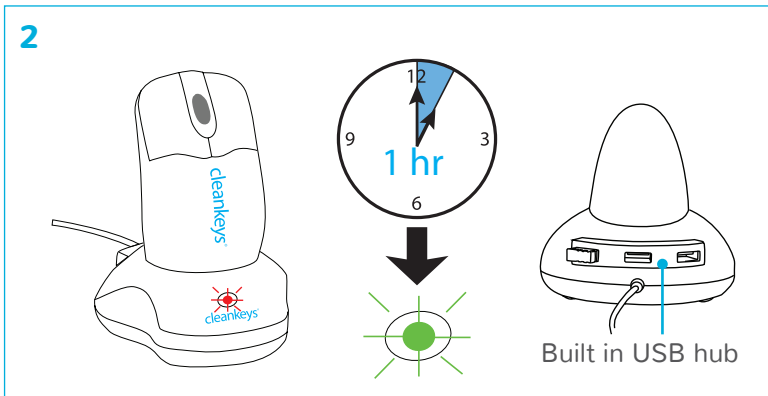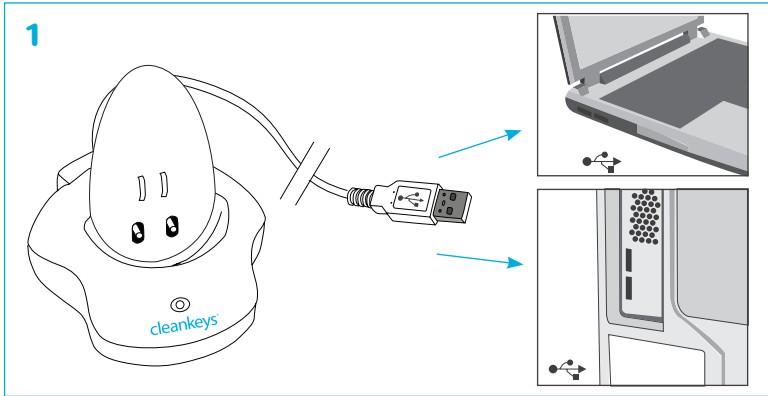

## Battery Charging

- Only use the CK mouse included wall charger
- The Mouse should be turned off
- Allow the Mouse to charge for one hour
- The battery LED will turn green when fully charged
- When disconnected from the charger, the battery LED will turn off



### Precautions in Handling and Use

Do not dry the CK Mouse with an appliance or heat source such as a microwave heating, dryers, and radiators.

Do not dispose of the CK Mouse in a fire.

Avoid leaving the CK Mouse in a car or in other surroundings with high temperatures. Do not dispose of the CK Mouse in the hot sun.

Do not dispose of the CK Mouse in temperatures higher than 60 °C.

Do not disassemble or damage or deform or modify the CK Mouse.

CK Mice should not be dropped, thrown, or subjected to other strong shocks.

Prefer to store the CK Mouse in a dry, cool place.

Do not use the CK Mouse with equipment which generates strong electromagnetic radiation.

Do not remove the battery off the CK Mouse.

Only charge the battery with included accessory.

Do not disassemble or damage or deform or modify the battery.

The positive and negative terminals of batteries should not be short-circuited with a metal object. If a battery was short-circuited, do not use it furthermore.

Do not carry or store the battery with metal necklaces, paper clips, or other metal items.

Do not allow the battery to get wet or be dropped into water or other liquids.

Do not apply solder directly to the battery.

### In the case of defective batteries:

Should fluid leaked from a battery come in contact with skin or clothing, the affected skin may be affected, and should be washed with water immediately.

Should fluid enter the eyes, damage may result; the eyes should be washed with water immediately, and medical attention sought.

If batteries leak fluid or give off strange smells, they should immediately be removed from the vicinity of any open flames. Leaking electrolyte may catch fire, causing ignition and rupture.

Damaged mice, mice with abnormalities (for example generation of heat) or mice having been exposed to any situations named above should not be used furthermore, independent from the fact if any defect is to be seen. In such a situation give the mouse for repairing to the manufacturer.


If younger children use the CK Mouse, their guardians should explain the proper handling method and precaution before using.

Charge the battery in the CK Mouse only. Do not charge in temperatures lower than 0 °C or higher than 45 °C.


Discharge the battery in the CK Mouse only. Do not discharge in temperatures lower than -20 °C or higher than 60 °C.

## Cleaning the Mouse

The Cleankeys Mouse can be cleaned with virtually any medical grade cleaner or disinfectant in use. IP68 certification ensures the mouse is 100% water and dust proof.

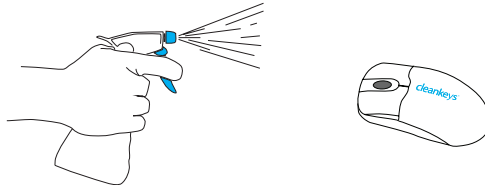


Important: The charging station and micro receiver are not waterproof and should only be cleaned with a lightly dampened cloth.

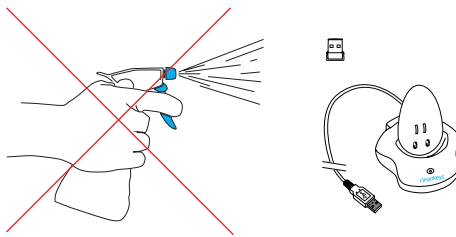

Note: Chemical resistance can vary depending on chemical concentrations and environmental conditions. We strongly recommend consulting with the disinfectant / cleaner manufacturer to ensure their product is safe for use on ABS plastics and silicone surfaces.

IP68 rated, which means they can also be submerged in water for cleaning.\*

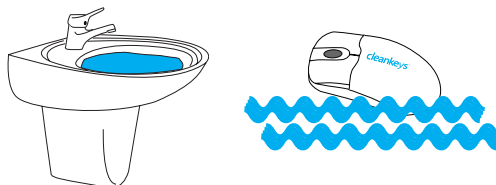

\* Cleankeys Mouse only!

## Technical Specifications

<b>Mouse</b>	Length:	4.60 in.	(117 mm)
	Width:	2.56 in.	(65 mm)
	Height:	1.48 in.	(37,5 mm)
	Weight:	0.177 lbs	(80 g)
<b>Material</b>	Base:	ABS plastic	
	Wheel:	Silicone	
	Color:	White	
<b>Button Design</b>	2 button		
<b>Scroll Function</b>	Scroll Wheel with Page Grabber technology		
<b>Pointer Technology</b>	LED		
<b>Resolution</b>	800 DPI		
<b>Connections Types</b>	<ul style="list-style-type: none"> <li>• 2.4 GHz receiver for mouse</li> <li>• USB cable for base</li> </ul>		
<b>EMI - RFI</b>	Conforms to FCC rules for a Class B computing device		
<b>Water and Dust Ingress</b>	IP68 (resp. waterproof) <sup>1</sup>		
<b>Certifications</b>	NEMA 4x, RoHS, WEEE, CE, FCC		
<b>Compatibility</b>	Mac / Windows Compatible		

<sup>1</sup> mouse only







# cleankeys®

## Contact

**GETT Gerätetechnik GmbH**  
Mittlerer Ring 1  
08233 Treuen | Germany

Phone: +49 37468-660-0  
Fax: +49 37468-660-66

E-Mail: [info@cleankeys.com](mailto:info@cleankeys.com)

Internet: [www.gett.de](http://www.gett.de)  
[www.cleankeys.com](http://www.cleankeys.com)